

FTS, FTS-V, FTP-V, FTU-V FTW-V, FTP-V6, FTU-V6, FTW-V6

(AT) BEDIENUNGSANLEITUNG

(CH) BEDIENUNGSANLEITUNG

(CZ) NÁVOD K POUŽÍVÁNÍ

(DE) BEDIENUNGSANLEITUNG

(DK) MONTERINGSVEJLEDNING

(ES) MANUAL DEL USUARIO

(FR) MANUEL D'UTILISATION

(FI) KÄYTTÄJÄN OHJEET

(GB) USER MANUAL

(GR) ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΤΗ

(HU) HASZNÁLATI ÚTMUTATÓ

(IT) ISTRUZIONI D'USO

(LV) LIETOŠANAS INSTRUKCIJA

(LT) STOGO LANGO EKSPLOATACIJOS INSTRUKCIJA

(NO) BRUKSANVISNING FOR FAKRO TAKVINDU

(NL) GEBRUIKSAANWIJZING

(PL) INSTRUKCJA UŻYTKOWANIA

(RO) INSTRUCȚIUNI DE UTILIZARE


(RU) ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ

(SE) BRUKSANVISNING FAKRO


(SK) NÁVOD K OBSLUHE

(SI) NAVODILA ZA UPORABO

(UA) ІНСТРУКЦІЯ ПО ЕКСПЛУАТАЦІЇ

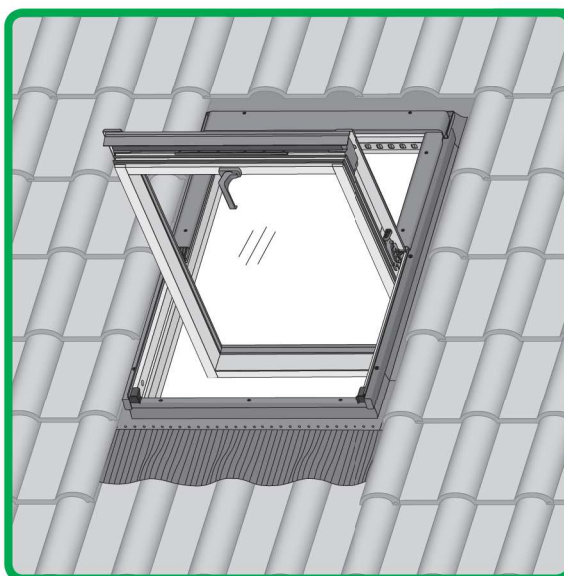

FTS
FTS-V
FTP-V
FTU-V
FTW-V
FTP-V6
FTU-V6
FTW-V6

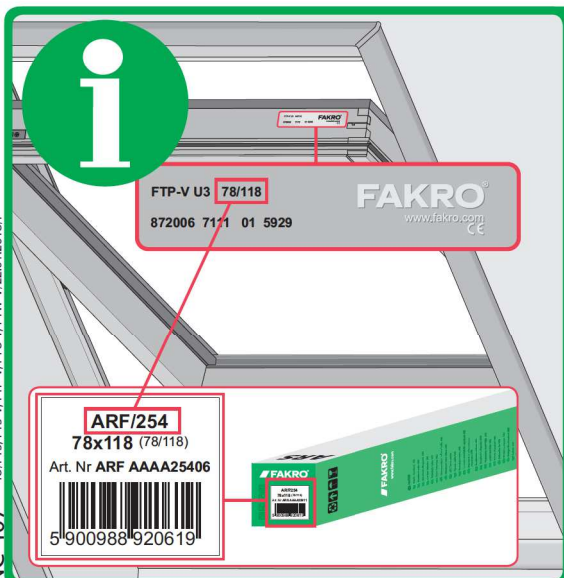

ARS
ARP
ARF
AJP
APS
APF







AMZ
ARZ


FTP-V U3 78/118
872006 7111 01 5929

FAKRO®
www.fakro.com
CE



ARF/254
78x118 (78/118)
Art. Nr ARF AAAA25406
5 900988 920619



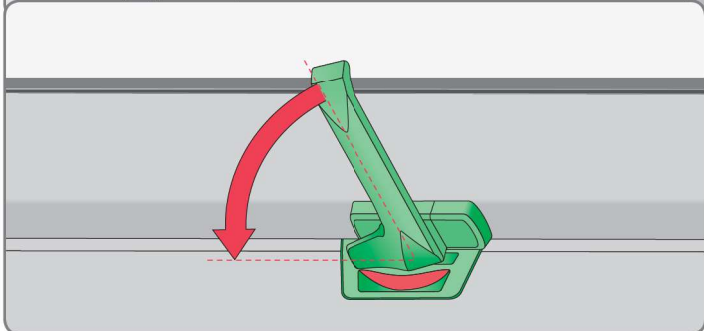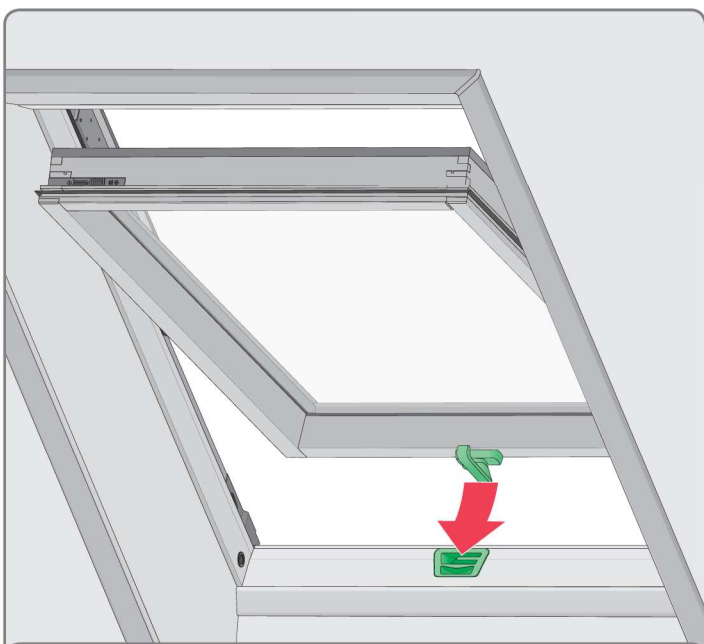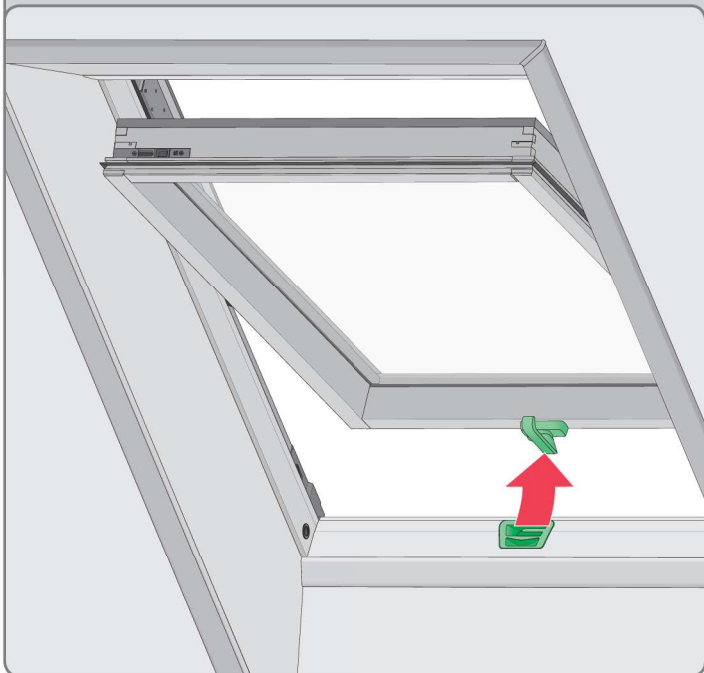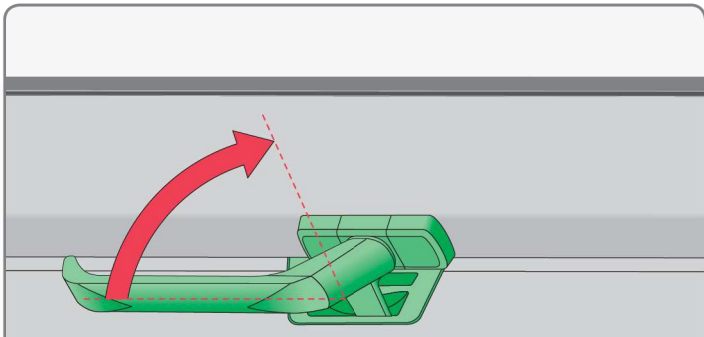

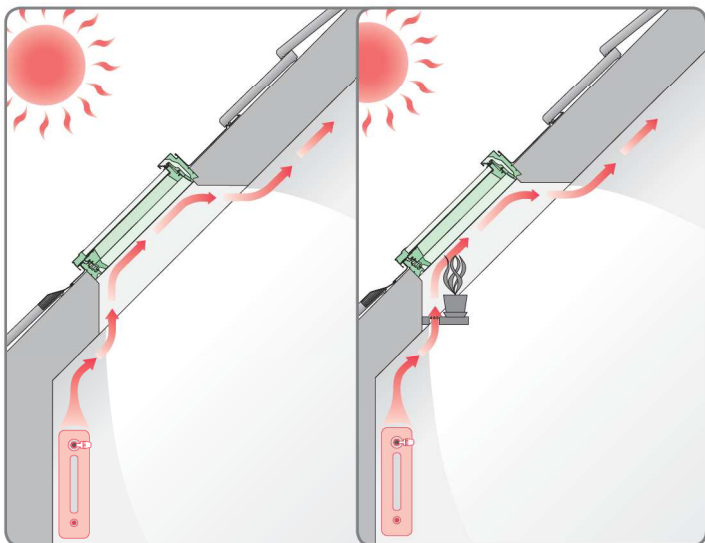

V10, V20, V40P

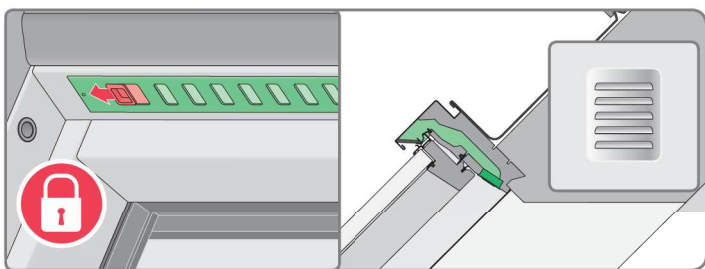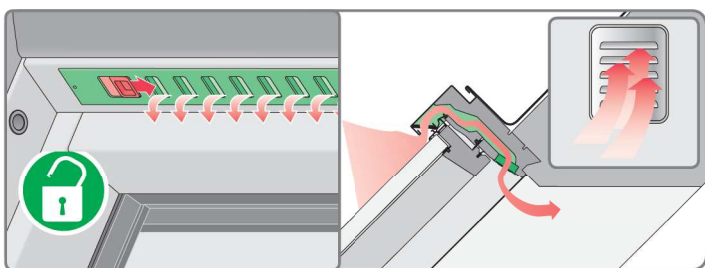

V60

