

## FTS, FTS-V, FTP-V, FTU-V FTW-V, FTP-V6, FTU-V6, FTW-V6

(AT) BEDIENUNGSANLEITUNG

(CH) BEDIENUNGSANLEITUNG

(CZ) NÁVOD K POUŽÍVÁNÍ

(DE) BEDIENUNGSANLEITUNG

(DK) MONTERINGSVEJLEDNING

(ES) MANUAL DEL USUARIO

(FR) MANUEL D'UTILISATION

(FI) KÄYTTÄJÄN OHJEET

(GB) USER MANUAL

(GR) ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΤΗ

(HU) HASZNÁLATI ÚTMUTATÓ

(IT) ISTRUZIONI D'USO

(LV) LIETOŠANAS INSTRUKCIJA

(LT) STOGO LANGO EKSPLOATACIJOS INSTRUKCIJA

(NO) BRUKSANVISNING FOR FAKRO TAKVINDU

(NL) GEBRUIKSAANWIJZING

(PL) INSTRUKCJA UŻYTKOWANIA

(RO) INSTRUCȚIUNI DE UTILIZARE


(RU) ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ

(SE) BRUKSANVISNING FAKRO

(SK) NÁVOD K OBSLUHE

(SI) NAVODILA ZA UPORABO

(UA) ІНСТРУКЦІЯ ПО ЕКСПЛУАТАЦІЇ

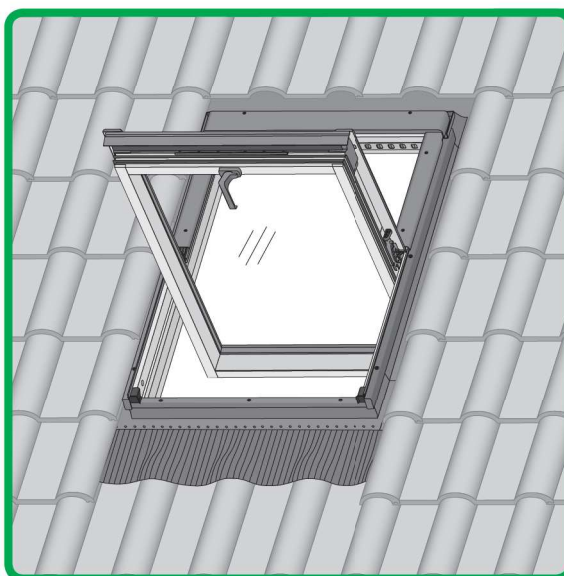





FTS  
FTS-V  
FTP-V  
FTU-V  
FTW-V  
FTP-V6  
FTU-V6  
FTW-V6




ARS  
ARP  
ARF  
AJP  
APS  
APF





AMZ  
ARZ

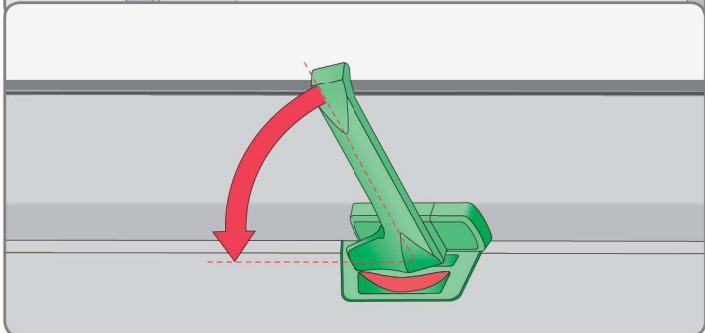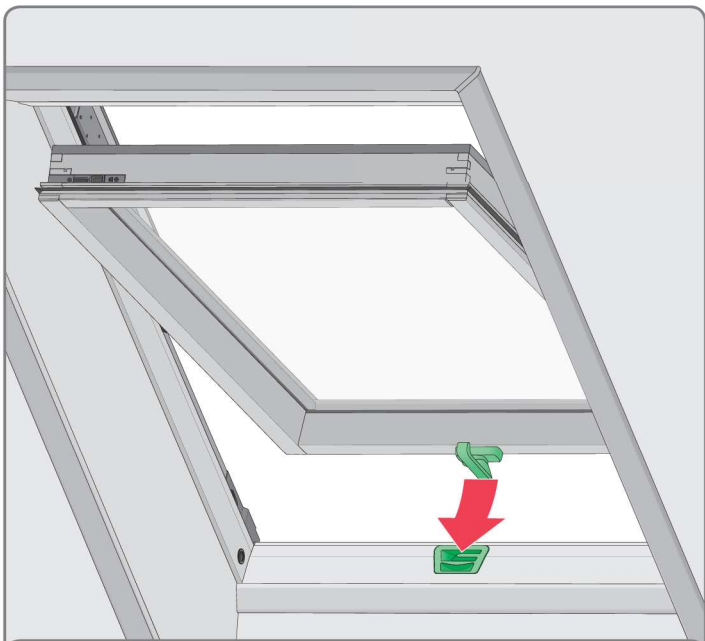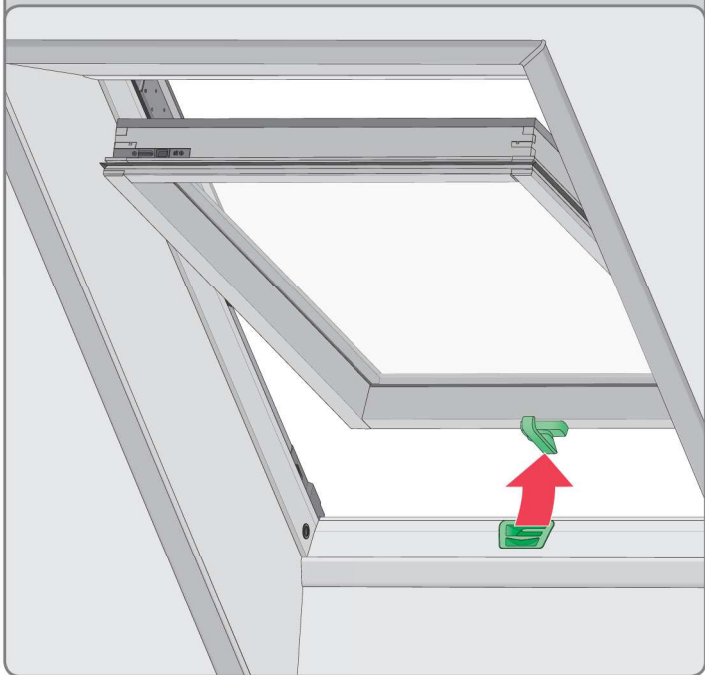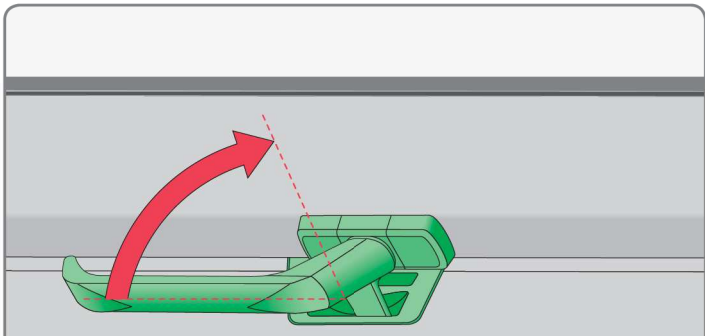

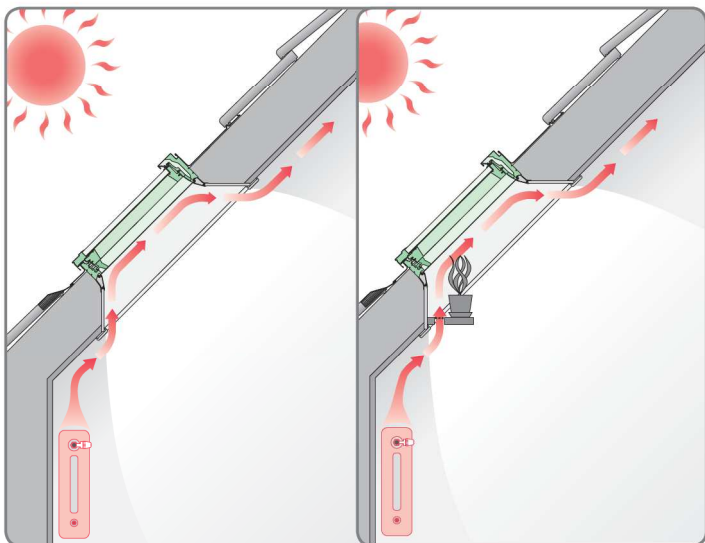

V10, V20, V40P

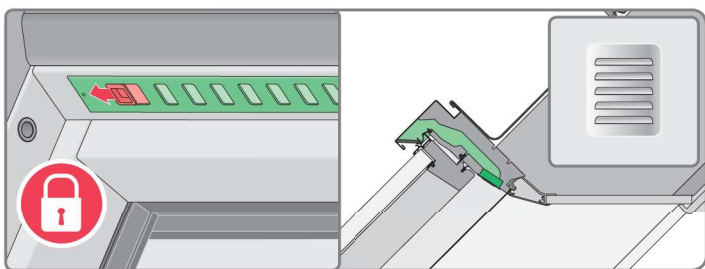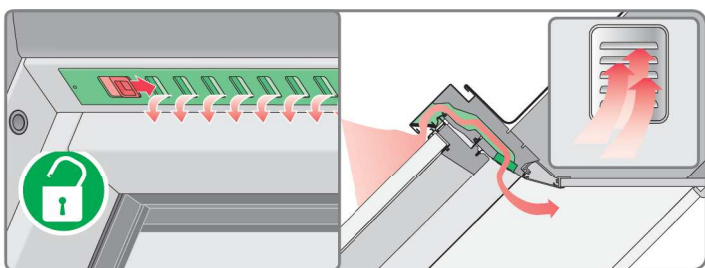

V60

